# HORTÍTEK S | X B A R

INSTRUCTION MANUAL



### **PRODUCT SPECIFICATIONS**


Product Code		M4444	
Power		620W	
Voltage Range / Frequency		100-277V ~ 50/60Hz	
Current	Amp @ 120V:	5.45A	
	Amp @ 208V:	3.0A	
	Amp @ 220V:	2.85A	
	Amp @ 230V:	2.75A	
	Amp @ 240V:	2.65A	
	Amp @ 277V:	2.30A	
PPF Efficacy		2.5µmol/J	
Max PPF		1550 <b>µ</b> mol/s	
сст		4000K	
CRI		85%	
PF		>0.95	
THD		<10%	
Beam Angle		120°	
Control Panel		OFF / 25% / 50% / 75% / 100% / RC	
External Control		Compatible with 0-10V LED Controllers	
Signal Cable		3.5mm TRS Male Jumper Cable	
Thermal Management		Passive	
BTU/h		2116	
Protection		Over-Voltage, Open Circuit, Short Circuit	
Dimensions		1175x1172x67mm   46.3"x46.1"x2.6"	
Weight		11kg±0.3kg   24.2±0.66 lbs	
Working Temperature		0°C to 40°C /32°F to +104°F (95% RH)	
Storage Temperature		-40°C to 70°C /-40°F to +158°F (85% RH)	
IP Rating		IP65	
Warranty		3 Years	
Certificates			

#### **COVERAGE AREA**

LIGHT COVERAGE AREA					
Application	Vegetative	Flower			
<sup>1</sup> Hanging Height (cm)	70	30	20		
Max PPFD (µmol/s/m²)	500	850	1000		
Coverage Dimensions (m)	1.88 X 2.02	1.30 X 1.50	1.25 X 1.45		
<sup>2</sup> Coverage Area (m <sup>2</sup> )	3.80	1.95	1.82		


<sup>&</sup>lt;sup>1</sup>Hanging Height refers to the distance between the plant canopy and the LED.

## **DIMENSIONS (mm/inch)**

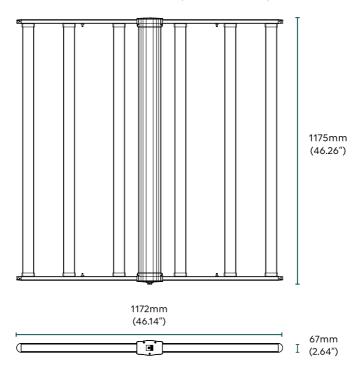

<sup>&</sup>lt;sup>2</sup>Coverage Area refers to the region that the plants receive at minimum 200PPFD for Flowering and 100PPFD for Vegetative.

### **INSTALLATION INSTRUCTIONS**

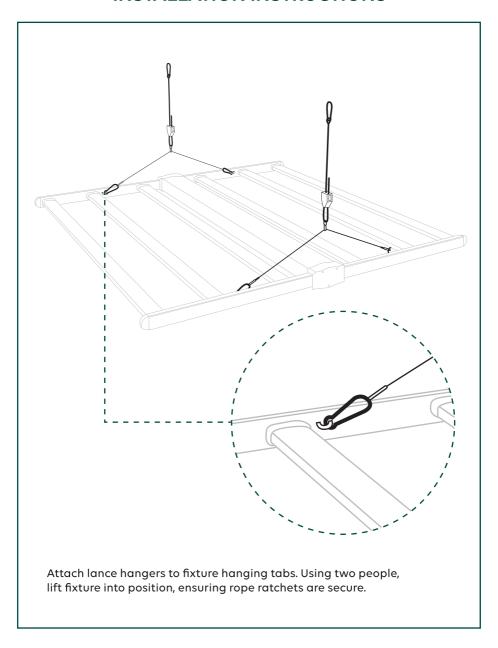

### HORTITEK

#### **OPERATION INSTRUCTIONS**



#### **POWERING ON**

Connect the SIX BAR to the power outlet using the AC Input Supply cable and power ON the fixture.


#### **DIGITAL CONTROL**

The SIX BAR features a 'Digital Control' that can switch between Power Dimming and Remote Control (RC) settings using the 'SET' button.

#### **CONNECTING MULTIPLE LED FIXTURES**

Connect the 3.5mm Male Jumper Cable between the Controller and the first 'IN' port on the SIX BAR.

To connect multiple SIX BAR's, continue to add Signal Cables between Fixture 'IN' & 'OUT' ports. Once connections are made, set the 'DIGITAL CONTROL' to 'RC' mode on all SIX BAR's.

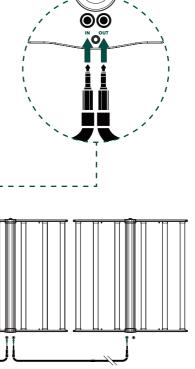

00000

#### HORTITEK

# WARRANTY - CONTACT YOUR RETAILER FOR WARRANTY CLAIMS AND SUPPORT

The company guarantees the mechanical and electronic components of this product. It ensures the materials and workmanship is free of defects, used under normal operating conditions.

If there are any defects with this product that relate to the workmanship or the materials used, the company shall, at its discretion, either replace or repair the product.

However, improper use is NOT covered by warranty. This includes but is not limited to, overloading, user error, physical or water damage.

Warranty is valid for a period of three years from the original date of purchase.

#### **SAFETY NOTES**

Ensure that there is no visible damage before installing or using this product. Keep away from hot objects and open flames.

Avoid touching during operation.

Ensure that selected power supply is switched OFF during installation.

Do not install underwater or in water soaked areas.

Do not use if power cable is damaged.

Do not attempt to service or replace LEDs yourself.

hortitek.com