



Assembly Instructions

0.7 W x 0.45 L x 0.7m H

Clone Tent






- High Quality Grow Tent
- Tough ABS Plastic Fittings
- 16mm Powder Coated Poles
- 600 D Double Stitched Fabric
- Heavy Duty Industrial Zippers

PRO GROW TENT


Professional Series

Assembly Instructions


Tent size (cm)	Tube 1	Tube 2	Tube 3	Tube 4	Tube 5	Tube 6	Tube 7
70x45x70 cm	x4	x4	x4	/	/	x1	/

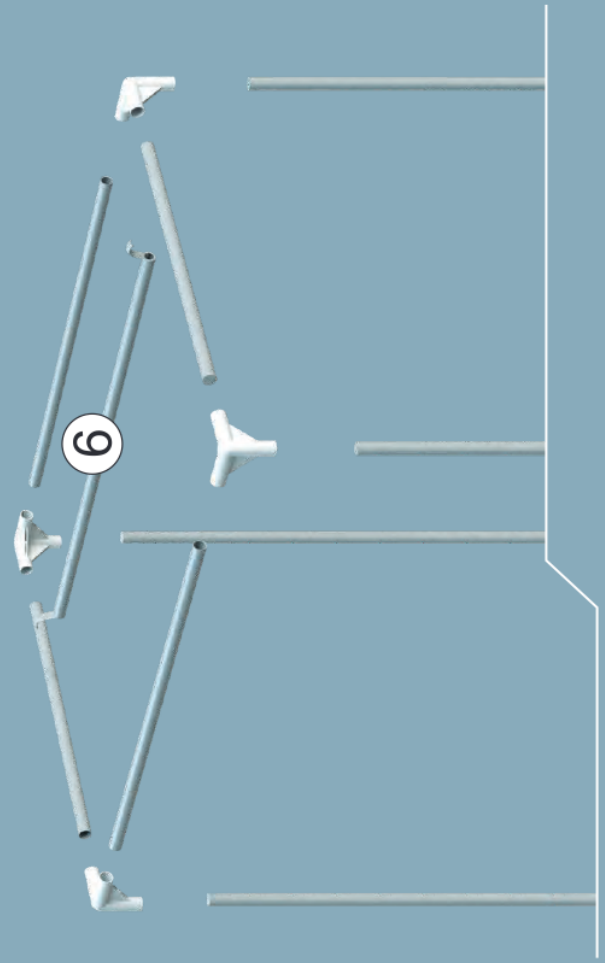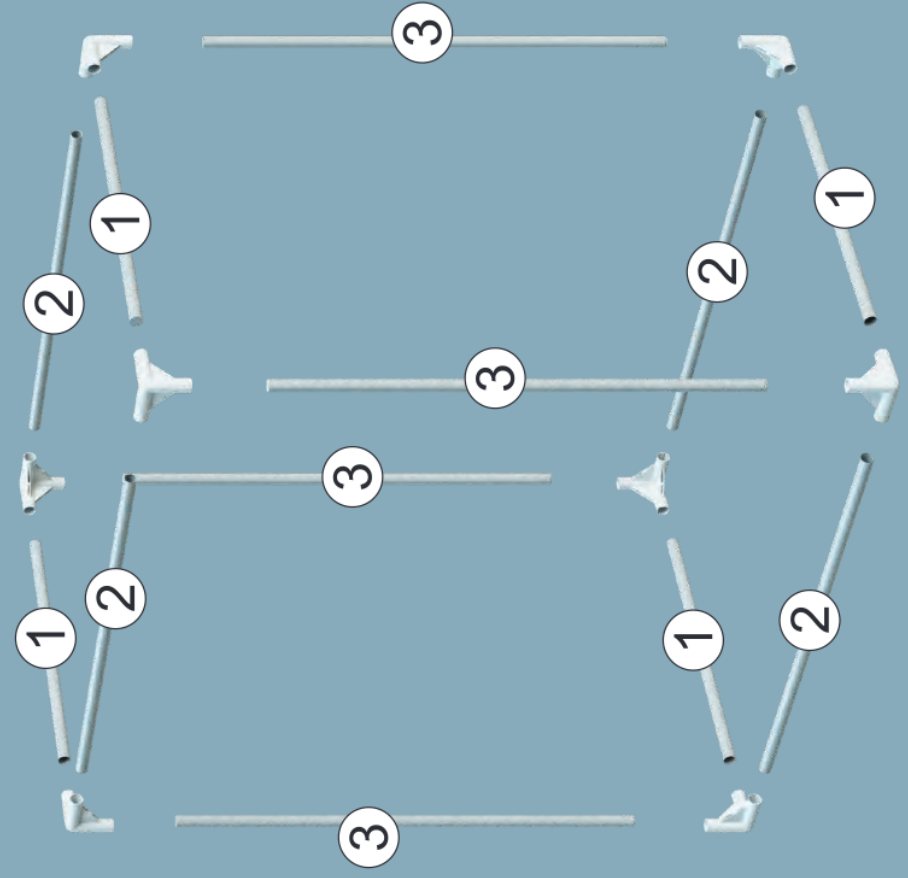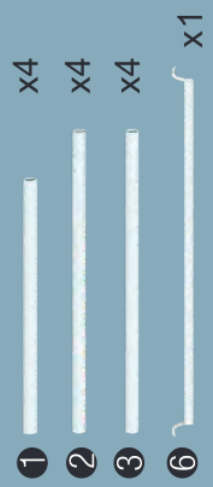

1

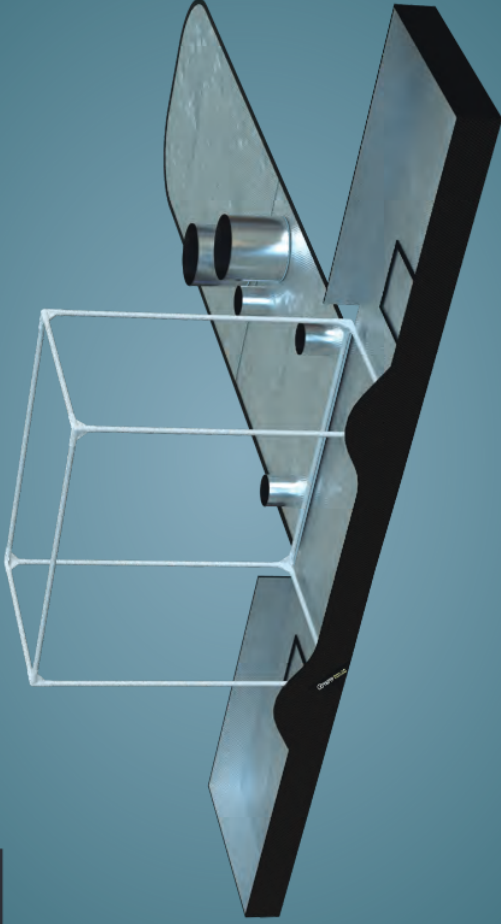


3

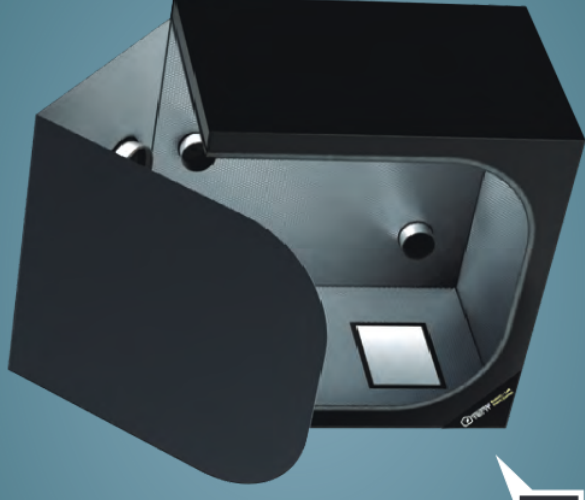

PRO GROW TENT
Bottom - Left
Front Corner

2

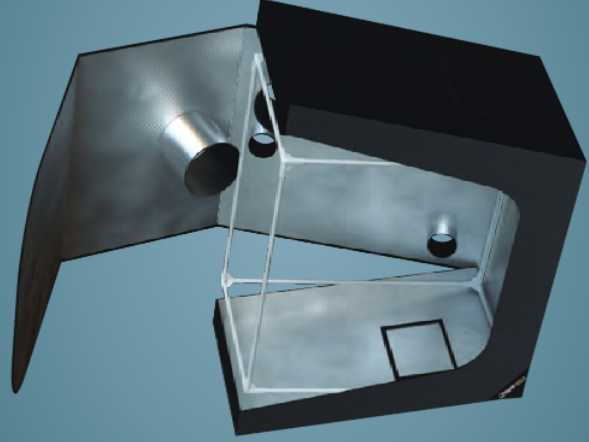

1. Unfold the tent and locate the bottom - left front corner tag for orientation. Place the assembled frame onto the tent base as pictured.
2. Lift the tent sides up and fit over the top sides of the frame.
3. Lift the back of the tent up and over the frame then zip the top and sides together.